

# Iveco Wing

Sedile autista

Sedile hostess

1	2
5	6
7	8
11	12
15	16
19	20

3	4
9	10
13	14
17	18

21	22	23
----	----	----

Porta anteriore



Porta emergenza

